

## STEP-BY-STEP INSTRUCTIONS

PHOTOSHOP: PRINT SETTINGS FOR LAB COLOURS

Before you start, calibrate your printer to PANTONE<sup>®</sup> VIBRANT by Felix Schoeller and ensure you are using the best and most up-to-date version of everything (firmware, printer drivers etc.). Create your file in LAB colour mode. Please follow the steps below and select the highlighted print settings for the best possible print results (You can leave all other settings unchanged or select individual ones as required):

## Properties of your Epson photo printer urrent Settings 🔿 Main 🗊 Page Layout 🥢 Utility Main Media Type: Printer Setup 2 Printer: Your Epson photo printer Select Setting : Current Settings Save/Del... Print Quality Level: Print Quality: S EVEL 5 High Speed: Color: Media Setting Layout: 👫 💦 Co Media Type : Premium Semimatte Photo Paper (260) 6 Custom Settings... Source: Auto Cut: Roll Pape nal Cu Color : Color • Photo Black Ink 💌 Auto Rotate: Off Color Ma ge Layo Paper Config... 0 Print Quality : Quality Options Portrait Off -Rotate 180°: Off 1 Mode : Automatic O Custor 8 Off (No Color Adjustment) Panto 3 Advanced... Color Handling: Photoshop Manages Colors 4 ter Profile: Printer + Premium Semimatte Photo Paper (260) Paper Settings Job Settings Off Source : Roll Paper • Roll Paper Option... Normal Printing User Defined... Size Pantone • (5)0 Borderless Ink Levels Print Preview Description Color Correction Color Adjustment: Off (No Color Adjustment) 🔲 Layout Manager Position and Size GR LLK LC VLM OR IK С PK MK VM Center Top Reset Defaults(Y) Version 6.73 Always show Current Settings. Close Abbrechen Hilfe OK 100% . Scale to Fit Media Match Print Colors Done

## Photoshop print settings for your Epson photo printer

## Photoshop print settings for your Canon photo printer

Photoshop Print Settings	Properties of your Canon photo printer	
Photoshop Print Settings	Main       Page Setup       Layout       Favorites       Utility       Support         Min       Page Setup       Layout       Favorites       Utility       Support         Get       Information       Advanced Settings       Advanced Settings         Advanced Settings       Print Priority :       Image       Print Priority :         S0 A3+:       12.95 in x 19.00 in       8       Color Mode :       No color correction	Printer Setup         Printer:       Your Canon photo printer         Copies:       1         Print Settings         Layout:       Fit         Color Management         management in the print settings dialog box.         Document Profile: Lab Color         Solor Handling:       Photoshop Manages Colors
	Incesh Fine Lines     Unidirectional Printing     Open Preview When Print Job Starts	Printer Profile: Printer + Semi-Glossy Photo Paper HG 255  Normal Printing  Rendering Intent: Absolute Colorimetric  Black Point Compensation > Description
	Status Monitor About Defaults OK Cancel Help	Y Position and Size     Position     Center Top: -5,839 Left: -0,617
		Scaled Print Size Scale: Height: Width: 100% 40,58 21,59 Scale to Fit Media Print Resolution: 300 PPI
	Match Print Colors Gamut Warning Show Paper White	Reset Done Print



Any questions? If so, please contact your dealer for further information.